Hi-Heater heating instantaneously

MIYAKAWA CORPORATION

CORPORATION

Miyakawa is a proposal-oriented business organization where "light and heat" are handled from engineering point of view.

Miyakawa provides not only manufacture and sale of Heaters but also make proposals on development of facility relevant to "light and heat" that will fulfill customers' satisfaction.

USA SAMPLE OF EACH FIELD

Resin

Film drying Blow molding Laminating Vacuum metalizing Resin hardening (short time) Stretching Resin adhesion

Fabric

Stretching textile thread Adhesion of fabric

Metal

Aluminum foil
Annealing steel sheet
Heat source of hot-pressing
Simulation equipment

Semi-conductor

Hardening conductive adhesive Development of heat source for annealing Heating equipment inside vacuum furnace

Electronic components

Soldering device Screening Resin hardening Local reflowing device

Glass · lens

Drying coated film Heat source for molding die Heating equipment of intermediate film

Miyakawa's technology used in various industries

Facility design technology









Applied technologies for "light and heat"



Applied technologies for hot air



Applied technology for Near-infrared ray



Applied technologies for medium wavelength infrared ray

Heating from room temperature to high Temperature range (up to 800°C)

*Maximum temperature depends on Various conditions

With the combination of compact body and a variety of blowing nozzle configuration, the heater meets customer's various needs such as local heating and wide area heating.

Technical strength that Miyakawa is proud of [3 points]

1. Long life thanks to improvement of durability performances

Coil-stopper mechanism is our own technology that improves durability performances. The technology can suppress change of coil shape that causes open heater.

2. Sensor to prevent extreme temperature rise is fixed to heater body


It prevents from overdriving of heater, when temperature-controlling thermocouple fails, heater opens or temperature regulator is out of order.

3. Wide variety of hot air blowing nozzle can be designed and manufactured

There are 2 kinds of nozzles to manipulate hot air, that is metal processing and glass processing. If a desired nozzle configuration is designated, the manufacturer will design and manufacture it.

Various kinds of the heaters


Other than the standard Hi-Heater, we have ①Micro Hi-Heater, ②N2 Hi-Heater (exclusive use for nitrogen), ③Burring Hi-Heater (exclusive for burring) and ④Slit nozzle.

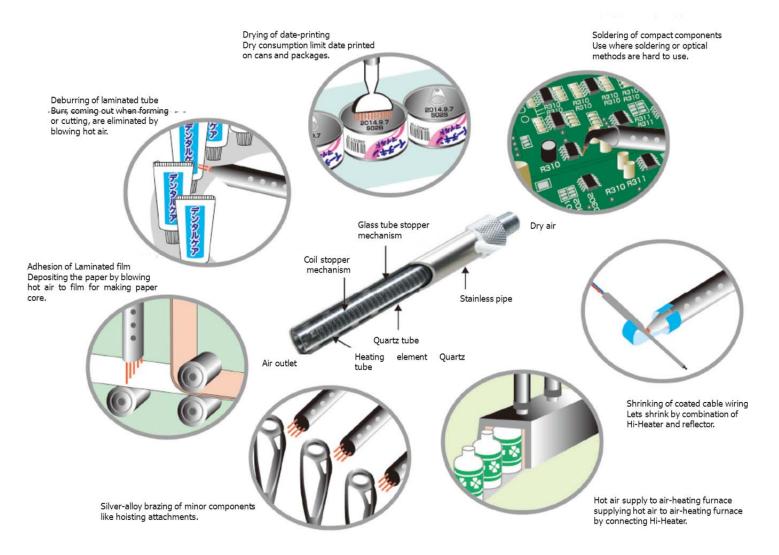



SAH series Standard Output Type (100W \sim 550W)



- T:Thermocouple for temperature regulation
- T2:Temperature control and overheating-prevention thermocouples
- T3:Thermostat to prevent overheating

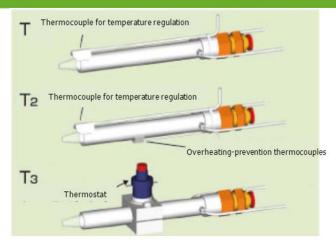


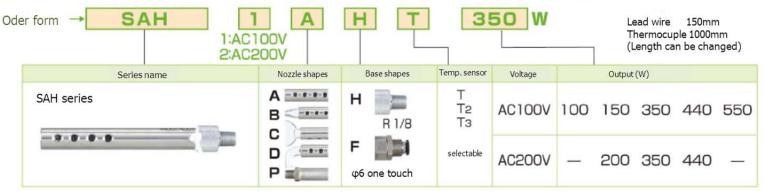

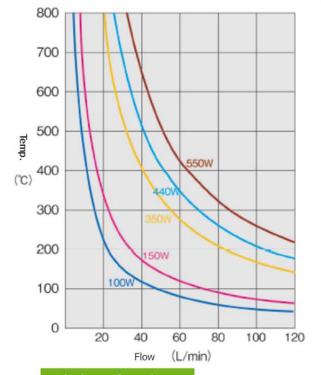


Calculating formula of approximate output

*Use it only as a guide for selection of heater output.




Dimensional drawing


*Common dimensions for 100W~500W

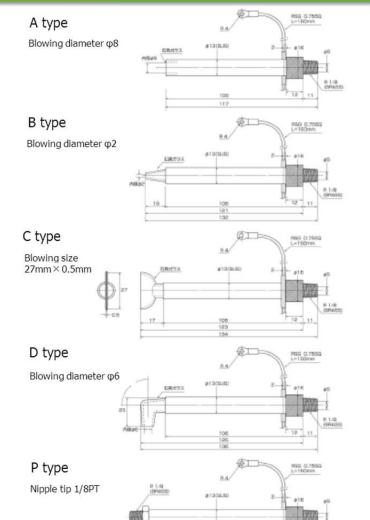


^{*}The manufacturer accepts manufacture of specially ordered diameter and size for B type and C type.

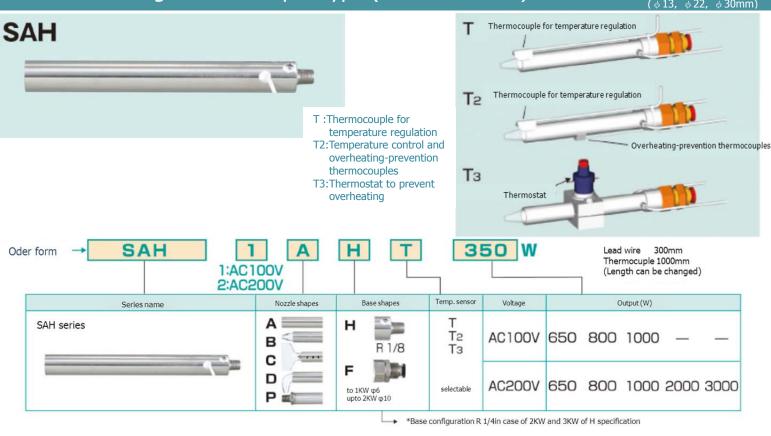


Relation between hot air discharge rate and temperature

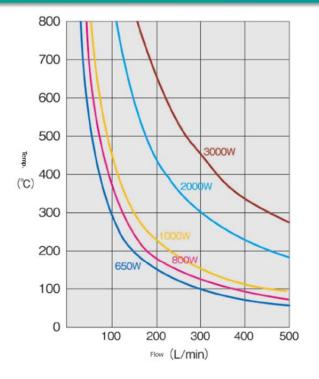


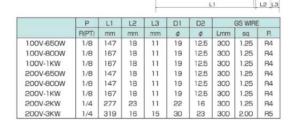


Dimensional drawing

(Refer to the chart below left for >800W)

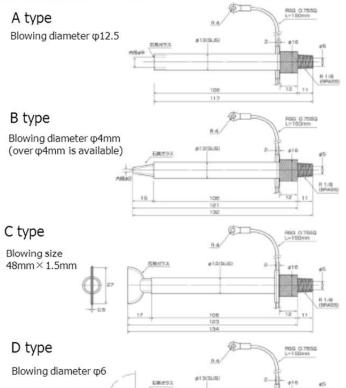

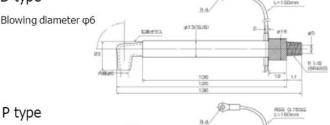

Nipple tip 1/8PT





*The manufacturer accepts manufacture of specially ordered diameter and size for B type and C type.

Before use

How to set the Hi-Heater and peripheral equipment

2 examples are shown here -"Recommended case" and "Simplified case.

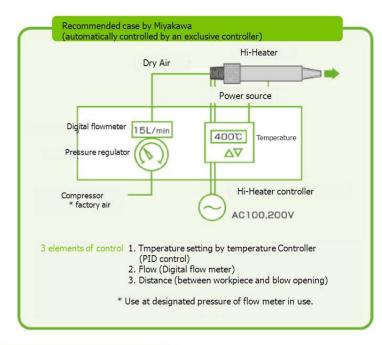

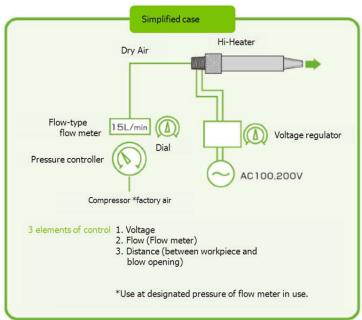

Controller for exclusive use

There are various types of controller from cheap edition to the all-in-one-type in which temperature, air pressure and air flow can be controlled. The manufacturer designs and manufactures controllers that meet the customers' needs. The details can be downloaded from the manufacturer's home page. Information materials from 1 to 3 below are available for the customers' review.



1. Temperature controller HYK-210L





Temperature, air pressure and flow controller
 HYK-110AFD
 (DIGITAL FLOWMETER)



3) Example of meeting custom applications2 circuits controlling type

Heater-fixing bracket

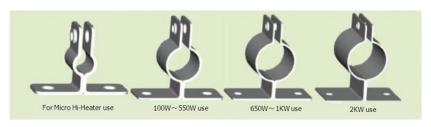



Special holders One-touch joint

Precautions for use

- Observe such work sequence strictly, that is, flowing air prior to putting electrical source and shutting it about 60 seconds after turning off the electric source.
- In case of using commercially available temperature controller, actual temperature may not be stable.
 It is recommended Miyakawa's exclusive controller to be used.
- Heater life could be extremely short if it is fixed to movable part such air-cylinder. Check once with the manufacturer.
- If calm condition (no wind) continues for long period or high loading voltage is applied to the heater at low flow (0~10L/min) atmosphere, blow opening of stainless tube begins to become red. If this state continues for 1~2minutes, the heater breaks (opens).

Be careful about the stainless tube not to become red heat.

Advance Knowledge when using Hi-Heater

Kind of gas

The gas which can be use for this basically "air".

Use gas which does not contain oil-mist moisture.

When using nitrogen, consult with the manufacture.

• Pressure and flow

Air pressure that suits Miyakawa's Hi-Heater is the range of 0.1Mpa to 0.3Mpa. With regard to flow, please refer to "Relation between hot air discharge rate and temperature" graph.

Rise time of Hi-Heater
 It reaches to preset temperature in 30∼60secs.

Goal of the heater temperature

Consult with the following 3 patterns with regard to the criterion whether the heater is used in good condition. In case of the standard output type, there are 4 openings on the stainless tube.

Color shade seen through these holes are the criterion.

Hot air of $600\sim700^{\circ}\text{C}$ is flowing. (goes red to the 3hd hole from right side)

Color of stainless tube is normal.

*As hot air temperature becomes high,
tube turns red from the right side of far

Too little air flow

Dry air 🖒 🔵 🌑 💮 📑


Hot air at hotter than 900° C is flowing. Head of stainless tube begins to glow.

No air flow



Central part of stainless tube glows.

Profile of temperature rise

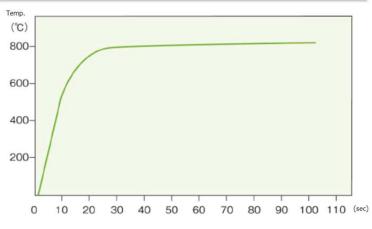

Measurement condition

Voltage:100V Type name of the measured unit: ASH-1AH(100V 350W) Flow: 15L/min Measuring position: At 2mm for tip of blow opening.

Background information for selection of Hi-Heaters (Refer to 3 and 4 pages)

Before use of the Hi-Heaters, please select 5 items on the right. If you have any questions. Please contact with the manufacturer.

1) Voltage

Select either One of 100V or 200V 2) Output

Select between

 $100W\sim3KW$

3) Nozzle configuration

Select from basic configurations-A, B, C, D, P. Dimensions are modifiable in case of B, C and D. In case of standard output type-B: 2mm diameter can be modified to 3mm and 4mm.

In case of standard output type-C:27mm \times 0.5mm can be modified freely.

5) Temperature sensor

Select from T, T2 and T3 type

T type "Temperature-regulating thermocouple" which is built in nozzle tip T2 type "T Temperature-regulating thermocouple" and "Overheating-prevention

thermocouple" (This is fixed to heater body and it prevents from over-driving of heater, when T fails, heater opens or temperature regulator is out of order.

T3 type Body temperature of heater is monitored by thermostat and overheating of the body prevented.

4) Base configuration

Two type of basic

H and F

The manufacture provides with special order items. Please indicate desired nozzle configuration



- ① Quartz nozzle 90°bent
- ② Quartz nozzle 45°bent (slit width:10mm×2mm)
- 3 Quartz nozzle Circle type facing blow
- ④ Metal nozzle 30°bent (φ2mm)
- ⑤ Metal nozzle 45°bent (φ2mm)
- 6 Metal long nozzle
- Metal flat nozzle porous hole type
- 8 Metal slit nozzle (0.15mm×100mm) * blows hot air like air curtain.
 - *Details about metal slit nozzle can be downloaded from the home page.

MIYAKAWA CORPORATION

Nichirei Akashicho Building

6-4 Nichirei Akashicho, Chuo-ku, Tokyo 104-0044 Japan

Tel: 81-3-3543-8491 / Fax.: 81-3-3545-9219
URL: http://www.mcp-hybec.co.jp/index.html